


SCHELL SCHELLTRONIC E²

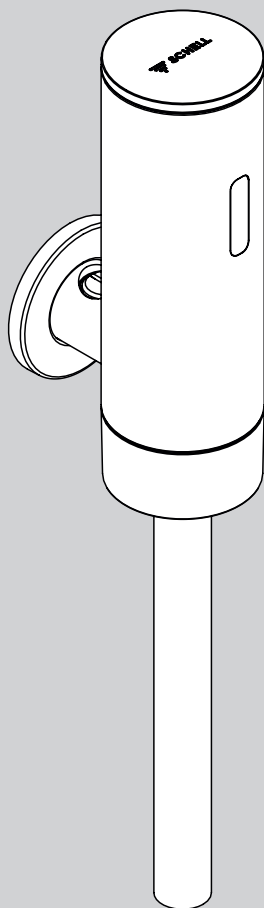

01 109 06 99

Ø 18 mm x 193 mm

Modell Benelux/France

01 110 06 99

Ø 15 mm x 314 mm

(EN) Installation manual

 **SCHELL**

- The product is intended for indoor use only.
- Only use the product in frost-free areas.
- Installation must be carried out by qualified personnel.
- Observe the standards and regulations applicable in the area of use.



WARNING

Risk of injury from electricity!

Improper handling of the product can lead to electric shock.

- Installation, repair and replacement of electronic components may only be carried out by trained, qualified electricians.
- Switch off all affected fuses before working on the electronics. Protect the fuse from being switched on again.
- Check the product for damage before working on and using it. Do not install or use the product if an electronic component is defective. Do not touch defective and live parts under any circumstances!



Safety instructions for batteries

Remove batteries before storage of device / Immediately seek medical advice if swallowed / Do not mix used and new batteries / Do not mix different brands or types / Check for correct polarity (+/-) / Keep away from children / Do not swallow / Do not dispose in fire / Do not disassemble / Do not recharge / Battery can explode or leak if shorted.

Installation instructions


Please consult the SCHELL „General installation conditions“ available at www.schell.eu -> Service/Downloads/Installation instructions.

- Flush the pipe thoroughly before installation.
- Turn off the water supply before installation.
- Seal the thread before screwing the fitting in by hand.

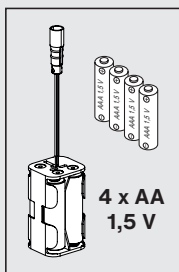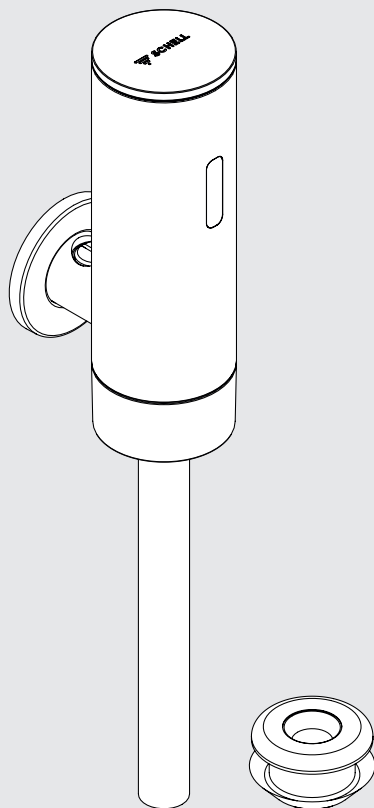

01 109 06 99
Ø 18 mm x 193 mm

Modell Benelux/France
01 110 06 99
Ø 15 mm x 314 mm

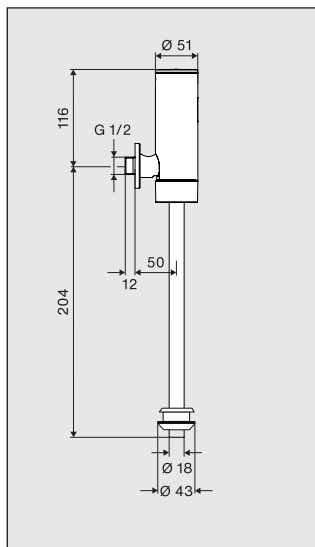

EN Technical specifications

Flow pressure: 1,0 – 5,0 bar

Flow rate: max. 5 l/min, druckunabhängig

Resting pressure: max. 8,0 bar

Flush flow: 0,3 l/s, nach DIN EN 12541

Factory settings

	Sensor setting	Medium
	Stagnation flush	Off
	Hybrid flush	Off
	Continuous run	Off
	Stadium programm	Off
	Cleaning stop	Off

Settings are made with the SCHELL app.













SCHELL App




App Store




Google Play

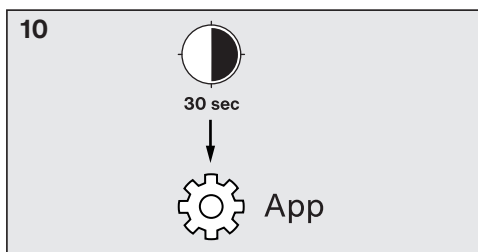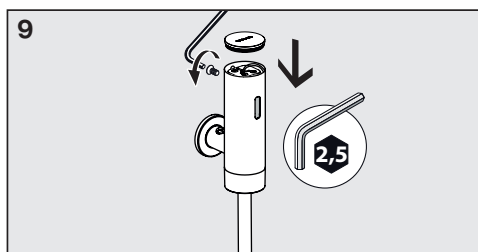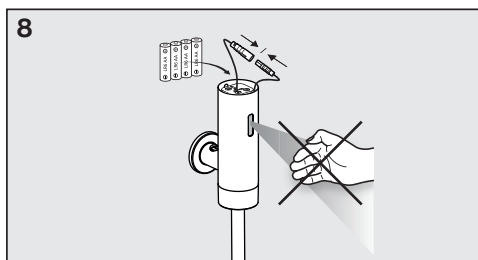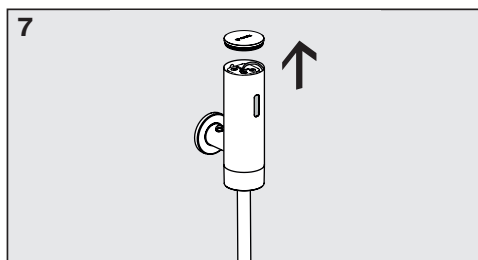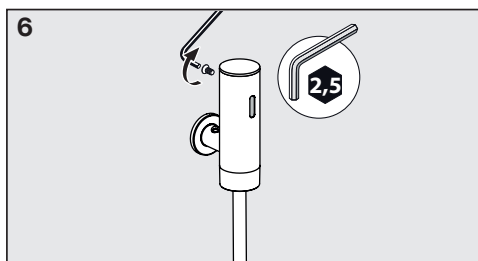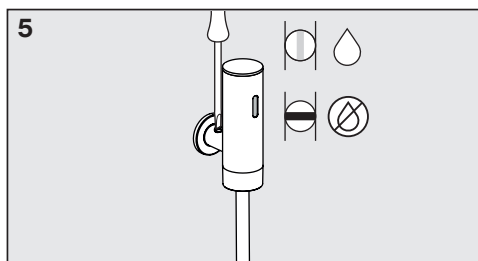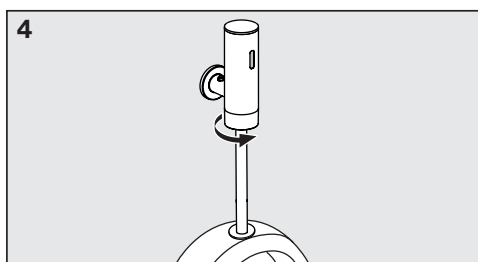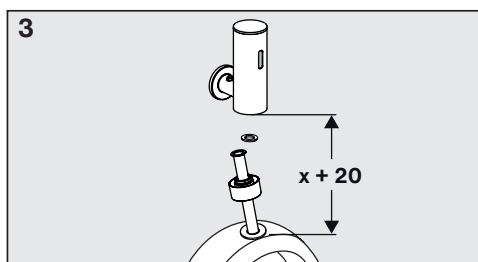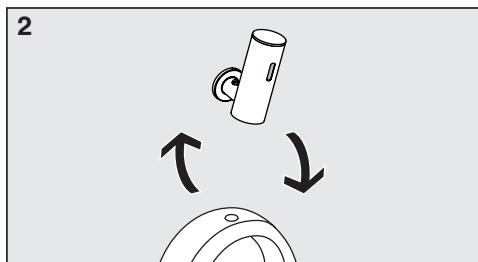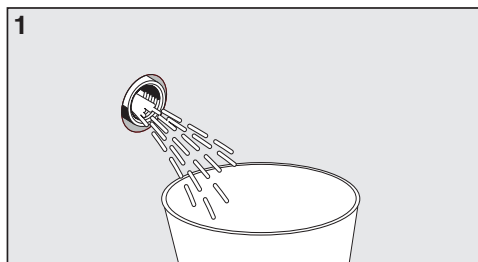


4a

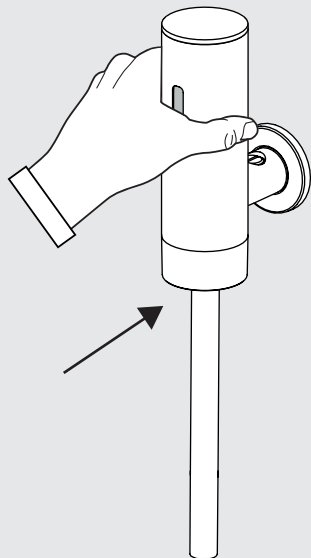


4b




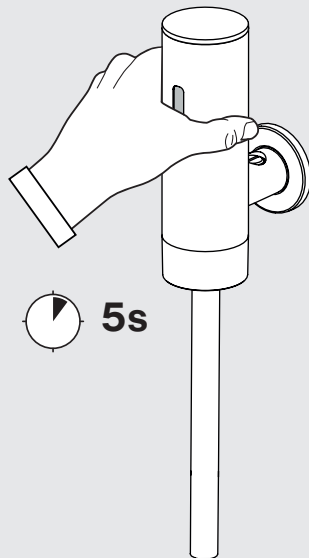










4c

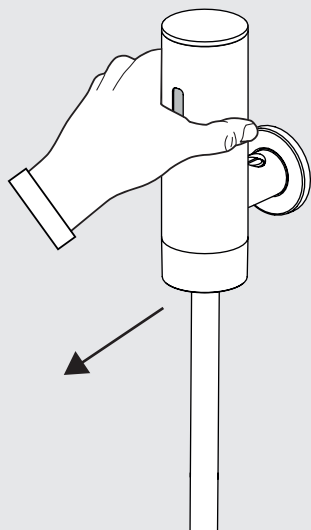

4d

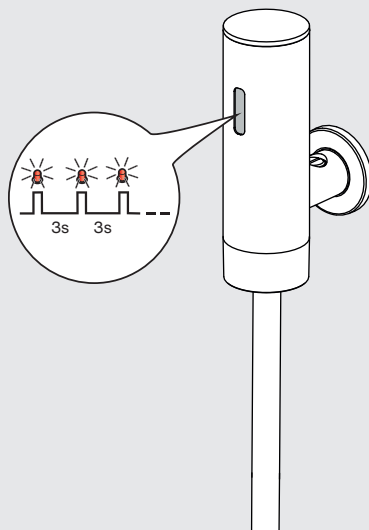

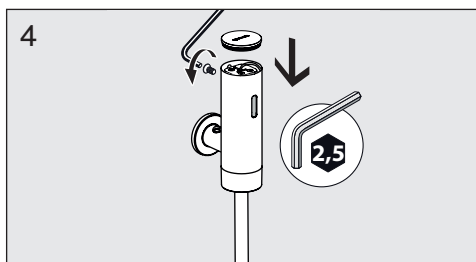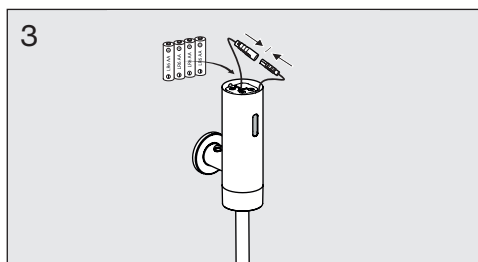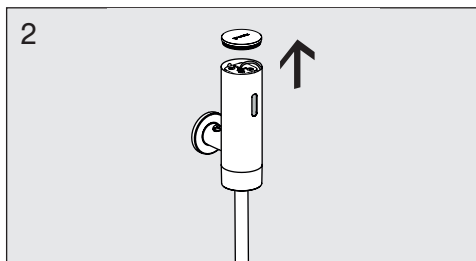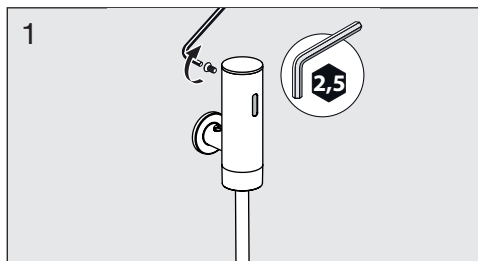

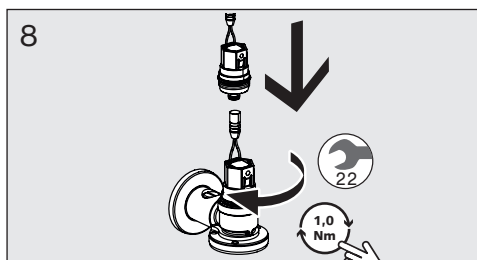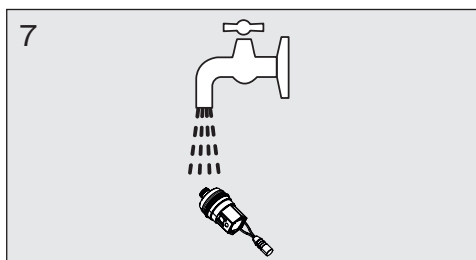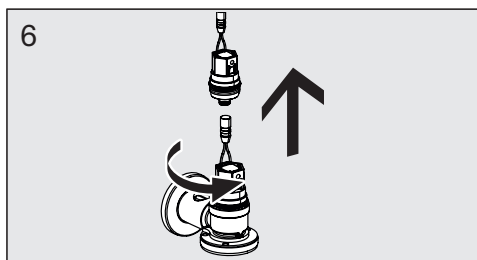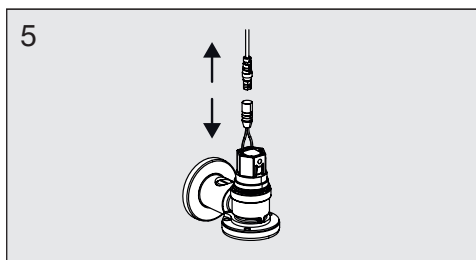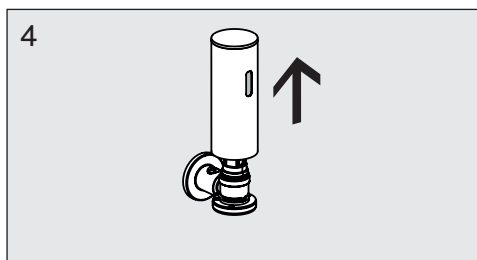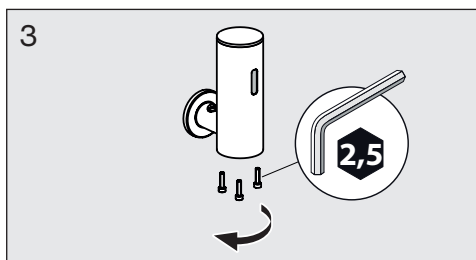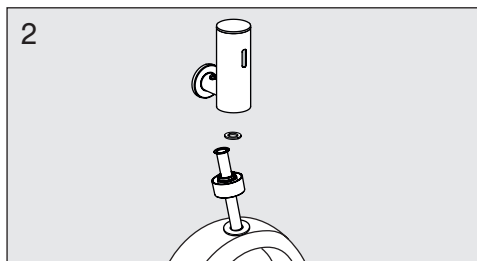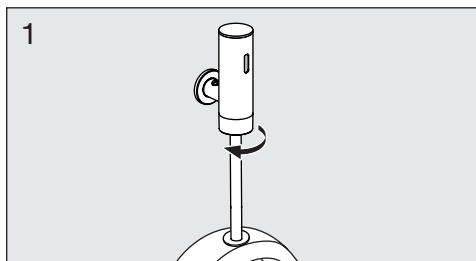


9 Reassembly in reverse order

For cleaning, use only soft cleaning cloths and standard, commercially-available cleaners and disinfectants without abrasive additives that are approved for the cleaning of chrome-plated plastic and brass.

CAUTION - Risk of damage to the product! Do not clean with steam cleaners!

For general care instructions, please see **www.schell.eu**.

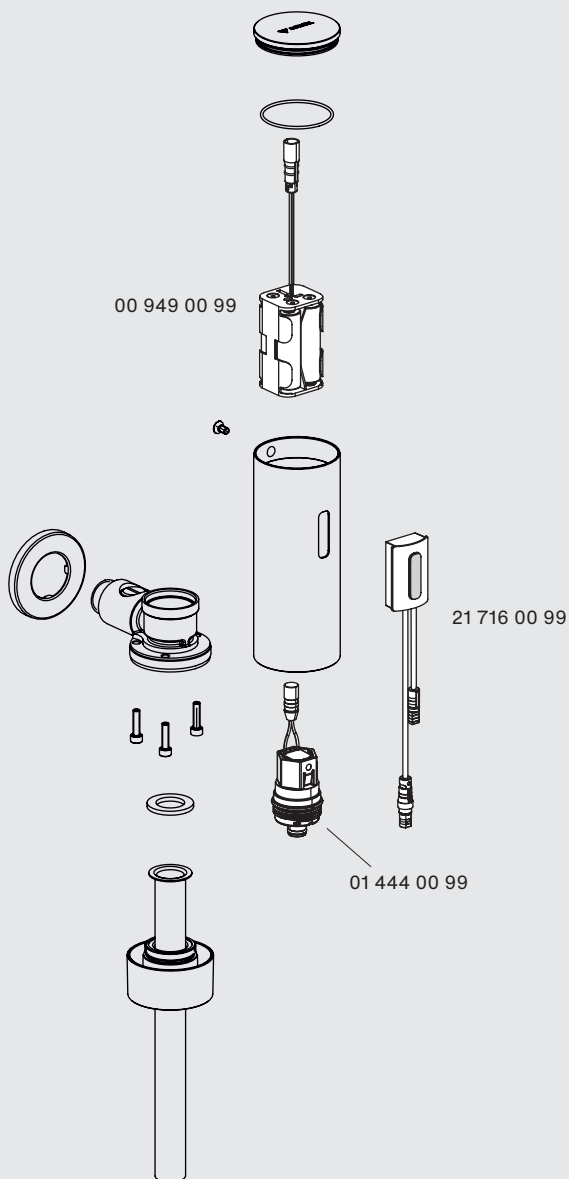

SCHELL GmbH & Co. KG
Raiffeisenstraße 31
57462 Olpe
Germany
Tel.: +49 2761 892-0
Fax: +49 2761 892-199
info@schell.eu
www.schell.eu

